

Quick Start for SmartLine® Controllers Standard Programming



Use PGM to select program
A, B, C, or D.








Use UP ▲ and DOWN ▼ arrow buttons to set
values for flashing options.

Use NEXT and BACK buttons to select
options and scroll between zones.

SmartLine® Standard Programming

(See reverse side of card for Auto Adjust
Programming Instructions).

Manual Operation

- 1** • Set time of day (AM/PM) and month/day/year. 
- 2** • Set daily start times (AM/PM) for Programs (A, B, C, D) in use. Normally, one start time is sufficient when you are using Auto Adjust. The start time is for the Program and not each zone. The Program will run all zones in consecutive order for each start. 
- 3** • Set zone run times (1 min to 9 hours 55 minutes) for Programs (A, B, C, D) in use. 
- 4** • Set watering days by selecting days of week or interval (1 to 30 days) or odd or even days for Programs (A, B, C, D) in use. 
- 5** • Set omit times, days, and dates to accommodate watering blackout periods (optional). 
- 6** • Set seasonal % by month for Programs A, B, C, D (optional). 
- 7** • Return dial to RUN. 

Manual Test

Turn dial to MANUAL TEST. Use UP ▲ and DOWN ▼ arrows to enter run time (10 seconds to 10 minutes) for all zones with assigned run time. **Return dial to RUN to start.**

Manual Zone

Turn dial to MANUAL ZONE. Use NEXT button to select zone to run. Use UP ▲ and DOWN ▼ arrow keys to select zone run time (1 min to 9 hours 55 minutes). **Return dial to RUN to start.**

Refer to Owner's Manual for
Advanced Functions dial
position.

Quick Start for SmartLine® Auto Adjust Programming

MODE



AUTO ADJUST
● STANDARD

ACTIVE ●
BYPASS ●



SENSOR

- 1** Installation of optional SLW weather station and Standard Programming is required for Auto Adjust programming.

- Verify correct time and date at Current Time/Date dial position.
- Enter Program Start Times, Zone Run Times, and Days. See Standard Programming instructions.
- Peel off label on the left side of the controller to review Auto Adjust settings.

- 2** • Turn dial to steps noted below. Use NEXT and UP ▲ and DOWN ▼ arrow keys for the following program steps:

- 3** • Enter ZIP Code or Latitude.



- 4** • Enter Sprinkler Type or Precipitation Rate for each zone. Unused zones should be set to OFF.

ZIP CODE or LATITUDE ●



SPRINKLER TYPE ●

- 5** • Enter Plant Type for each zone



PLANT TYPE ●

- 6** • Enter Soil Type and Degree of Slope for each zone.



SOIL TYPE ●

- 7** • Enter More or Less setting (optional). Set % by zone to accommodate factors like shade, wind, and sprinkler inefficiencies.




MORE/LESS ●

- 8** • Return dial to RUN.



www.SMARTLINE.com

- 9** • Initiate communication with the SLW weather station. You will need to go to the SLW weather station and push down on the Rain Sense tab at the top for 15 seconds. If communications have been established, you will see an antenna icon on the bottom of the display. Flashing antenna icon indicates communication has occurred in last five minutes. See Owner's Manual.

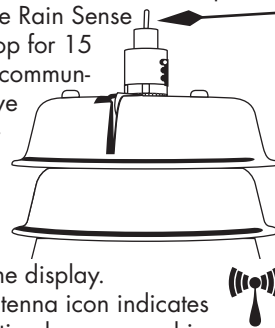

- 10** • Use MODE button to enter Auto Adjust. If you have communication with the SLW, the Auto Adjust GREEN LED will light. This confirms that you are operating in Auto Adjust.

- 11** • Select Active LED for sensor position so that the controller will shut down during rain and freeze events.



AD232—Rev. C